

PUBLIC SAFETY DIVISION

GO RHINO! PRODUCTS

PART NO. 570111

PARTITION INSTALLATION INSTRUCTIONS **2006-2010 CHEVROLET IMPALA WITH SIDE CURTAIN AIR BAGS**

PARTS LIST

QTY PART DESCRIPTION

- 1 5700CI PARTITION ASSEMBLY
- 1 57661 DRIVER B-PILLAR BRACKET
- 1 57662 PASSENGER B-PILLAR BRACKET
- 1 57611 DRIVER LOWER FILLER PANEL
- 1 57612 PASSENGER LOWER FILLER PANEL
- 1 57651 DRIVER UPPER FILLER PANEL
- 1 57652 PASSENGER UPPER FILLER PANEL
- 2 ¾" X 2" VELCRO LOOP STRIP
- 2 ¾" X 2" VELCRO HOOK STRIP

QTY PART DESCRIPTION


- 1 57672 PASSENGER FOOT BRACKET ASSEMBLY
- 1 57671 DRIVER FOOT BRACKET ASSEMBLY
- 8 ¼" X 1/2" FLANGED HEAD SCREW
- 4 3/8" FLAT WASHER
- 2 3/8" X 1" CARRIAGE BOLT
- 4 3/8" HEX NUT
- 2 57663 BOLT PLATE
- 4 3/8" LOCK WASHER

INSTALLATION INSTRUCTIONS



READ THE INSTALLATION INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION

STEP-1 ADJUST THE DRIVER AND PASSENGER SIDE FRONT SEATS TO THE FORWARD POSITION.


STEP-2 REMOVE THE PASSENGER SIDE CENTER INTERIOR B-PILLAR COVER. TO REMOVE THE COVER, OPEN THE FRONT AND REAR DOORS, PULL OUTWARD ON THE SIDES OF THE COVER THEN PULL UPWARD. **PHOTO'S #1 & #2**

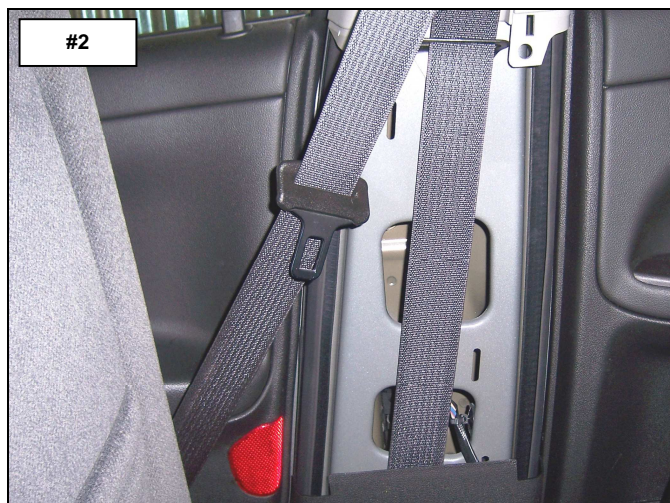


STEP-3 POSITION THE PASSENGER SIDE B-PILLER BRACKET FLUSH AGAINST THE B-PILLAR AND APPROXIMATELY 3/4" BELOW THE UPPER B-PILLAR COVER. USE THE BRACKET AS A TEMPLATE AND MARK THE LOCATION OF THE HOLE TO BE DRILLED. REMOVE THE BRACKET AND DRILL (1) 3/8" HOLE THROUGH THE B-PILLAR, **PHOTO'S #3 & #4**

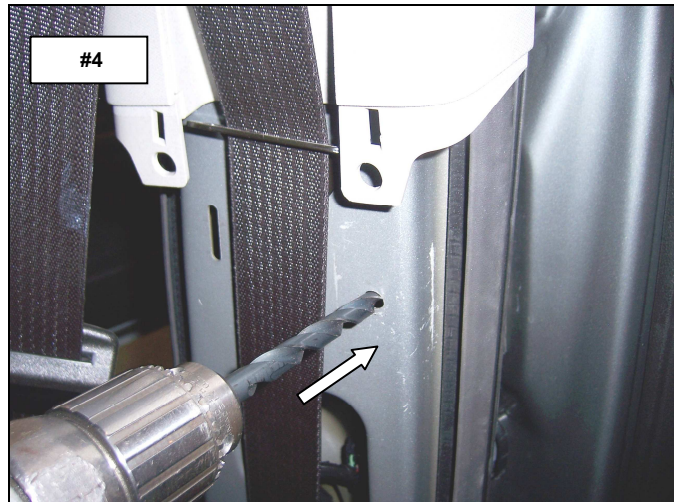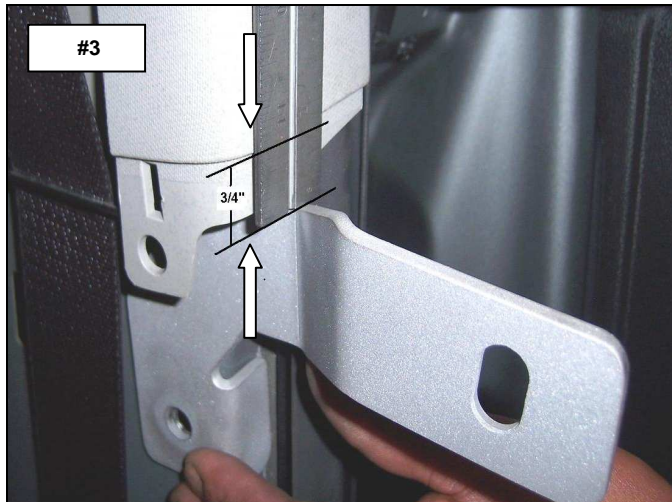

STEP-4 INSERT (1) T-BOLT THROUGH THE RECTANGULAR OPENING IN THE B-PILLAR AND POSITION IT SO THE BOLT EXTENDS OUT THROUGH THE DRILLED HOLE. ATTACH THE BRACKET TO THE B-PILLAR USING THE T-BOLT (1) 3/8" FLAT WASHER, (1) 3/8" LOCK WASHER AND (1) 3/8" HEX NUT. **PHOTO'S #5 & #6**

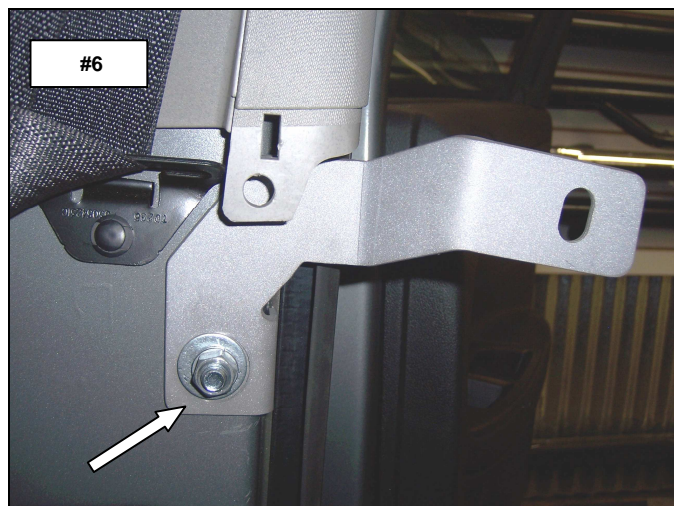

STEP-5 THE CENTER COVER MUST BE NOTCHED TO FIT PROPERLY WITH THE B-PILLAR BRACKET. MEASURE, CUT AND REMOVE THE SECTION FROM THE COVER. RE-INSTALL THE COVER. **PHOTO'S #7 & #8**

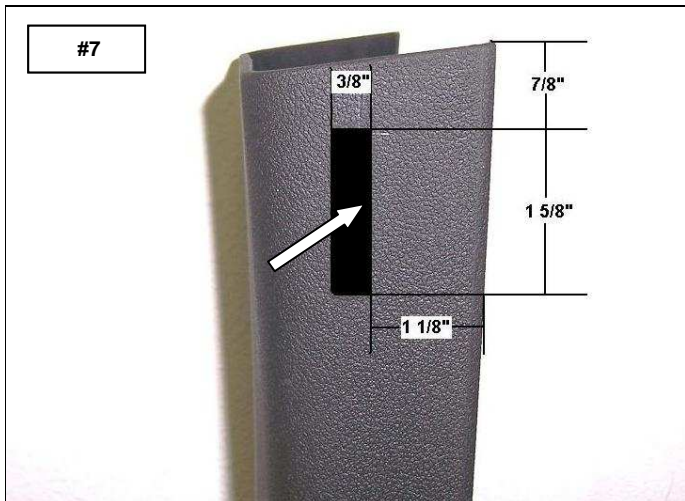

STEP-6 REMOVE THE PASSENGER SIDE OUTER SEAT TRACK MOUNTING BOLT. POSITION THE PASSENGER SIDE FOOT BRACKET ASSEMBLY UNDER THE TRACK AND RE-INSTALL THE SEAT TRACK BOLT. DO NOT TIGHTEN. **PHOTO'S #9 & #10**

REPEAT THE ABOVE STEPS TO INSTALL THE DRIVER SIDE B-PILLAR BRACKET AND FOOT BRACKET ASSEMBLY.



STEP-7 WITH ASSISTANCE MOVE THE PARTITION INTO THE VEHICLE THROUGH THE REAR DOORS. LEAN THE PARTITION BACK AND ALIGN THE PARTITION LEGS WITH THE FOOT BRACKET STUB TUBES, THEN SLIDE THE PARTITION LEGS OVER THE STUB TUBES. **PHOTO #11**

STEP-8 PIVOT THE PARTITION ON THE FOOT BRACKETS UP TO THE B-PILLAR BRACKETS AND ATTACH THE PARTITION TO EACH BRACKET USING (1) 3/8" X 1" CARRIAGE BOLT, (1) FLAT WASHER, (1) LOCK WASHER AND (1) HEX. **PHOTO #12**




STEP-9 TIGHTEN THE PARTITION BRACKET AND SEAT TRACK NUTS AND BOLTS.

STEP-10 ATTACH THE PASSENGER SIDE LOWER FILLER PANEL TO THE PARTITION USING (2) 1/4" X 1/2" FLANGED HEAD SCREWS. **PHOTO'S #13 & #14**



STEP-11 MEASURE AND APPLY (1) VELCRO LOOP STRIP TO THE PASSENGER SIDE UPPER FILLER PANEL. **PHOTO #15**

STEP-12 APPLY (1) VELCRO HOOK STRIP TO THE PARTITION UPPER FILLER PANEL TAB. **PHOTO #16**

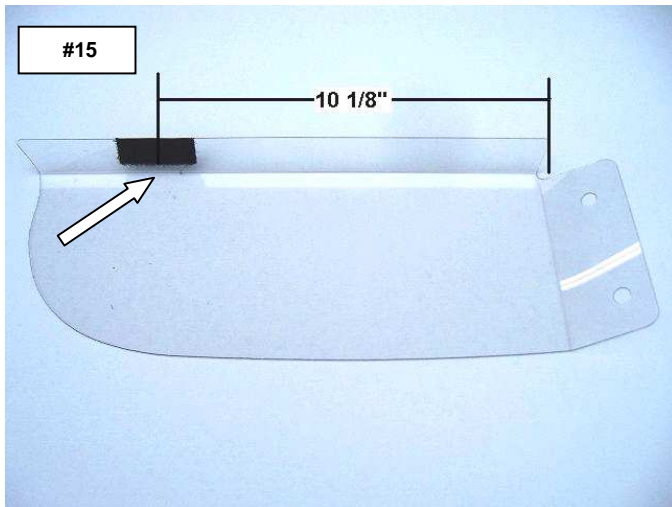

STEP-13 ATTACH THE UPPER FILLER PANEL TO THE LOWER FILLER PANEL USING (2) 1/4" X 1/2" FLANGED HEAD SCREWS THEN PRESS THE UPPER PANEL VELCRO STRIP AGAINST THE PANEL TAB VELCRO STRIP TO CONNECT THE TWO. **PHOTO #17**

REPEAT THE ABOVE STEPS TO INSTALL THE DRIVER SIDE UPPER AND LOWER FILLER PANELS.



**FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**